

◀ Check resistance of valve across valve terminals.

#### Idle speed control valve coil resistance

Terminals 1 and 2	$10 \pm 2\Omega$
Terminals 2 and 3	$10 \pm 2\Omega$
Terminals 1 and 3	$20 \pm 4\Omega$

#### CAUTION—


Be sure ignition is OFF before disconnecting or reconnecting DME system components.

- To remove valve, remove cable bracket mounting bolt and idle speed control valve mounting bracket bolts from front of throttle housing and remove idle speed control valve with attached bracket.

#### NOTE—

When installing idle speed control valve, remove intake boot sealing ring from valve and install into intake air boot. Then install valve into sealing ring.

## Evaporative emissions control diagrams

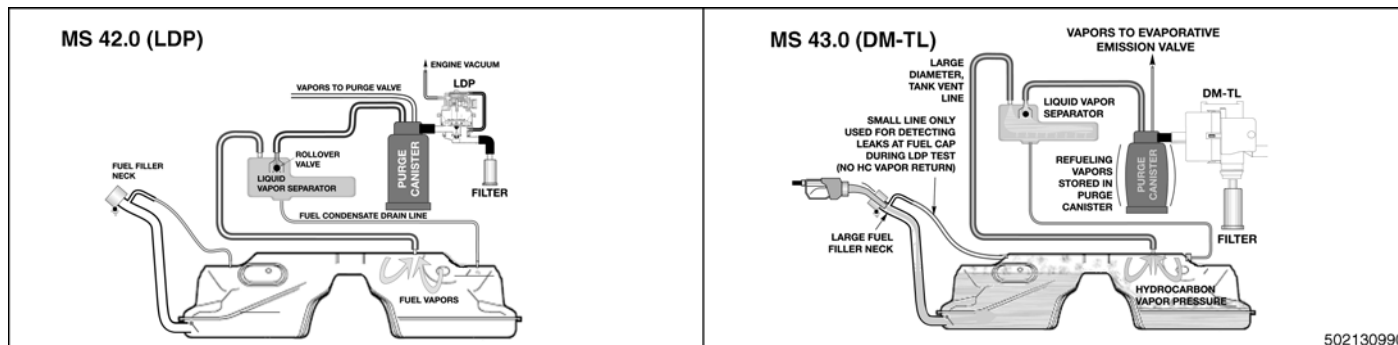

## Evaporative emissions control, (MS 42.0, MS 43.0)

E39 models with MS 42.0 or MS 43.0 engine are equipped with a fuel system evaporative pressure leak diagnosis system. The main component of this system is the leak diagnosis pump (LDP or DM-TL). The function of either system is to pressurize the fuel tank and the evaporative emission system for the purpose of detecting leaks.