

to 2001




TURN SIGNALS, TAILLIGHTS

Front turn signal assembly, removing and installing

This procedure includes turn signal bulb replacement.


- Open engine hood,
- ◀ **Models to 2001:** Use long screwdriver to press turn signal assembly retaining clip down to disengage from retaining tab on headlight assembly frame.

to 2001

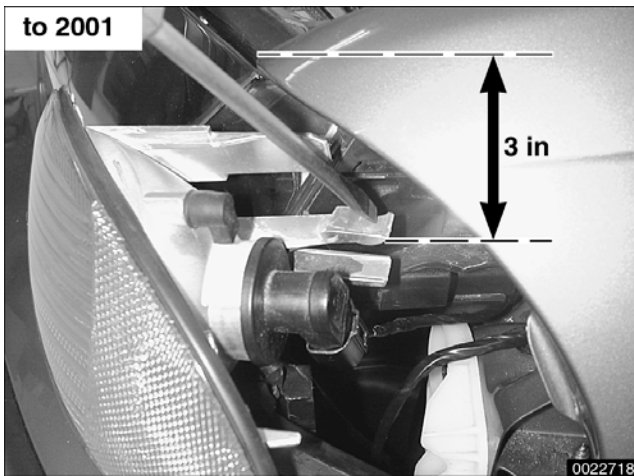

- ◀ Screwdriver must reach into fender hole a minimum of 3 inches to reach retaining tab.

from 2002

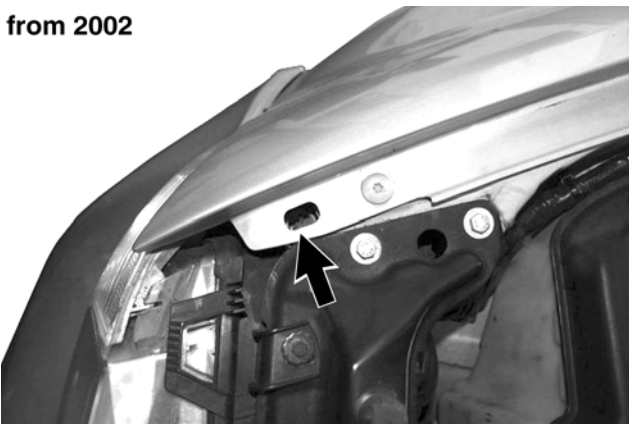

- ◀ **Models from 2002:** Loosen clamping bracket screw until light can be removed. Support light while loosening screw.
- Push turn signal assembly forward out of fender. Assembly slides straight out.
- Detach electrical harness connector.
- Twist and remove bulb from rear of turn signal assembly.

CAUTION —

Do not touch bulb with your bare hands. If necessary wipe bulb using a clean cloth dampened with rubbing alcohol.

NOTE —

Before reinstalling, make sure rubber seal on wrap-around trim (underneath headlights) is firmly glued to trim. Reglue if necessary.

Front turn signal

- Turn signal bulb.12V 21W