


Wiring Diagrams **E1.2**

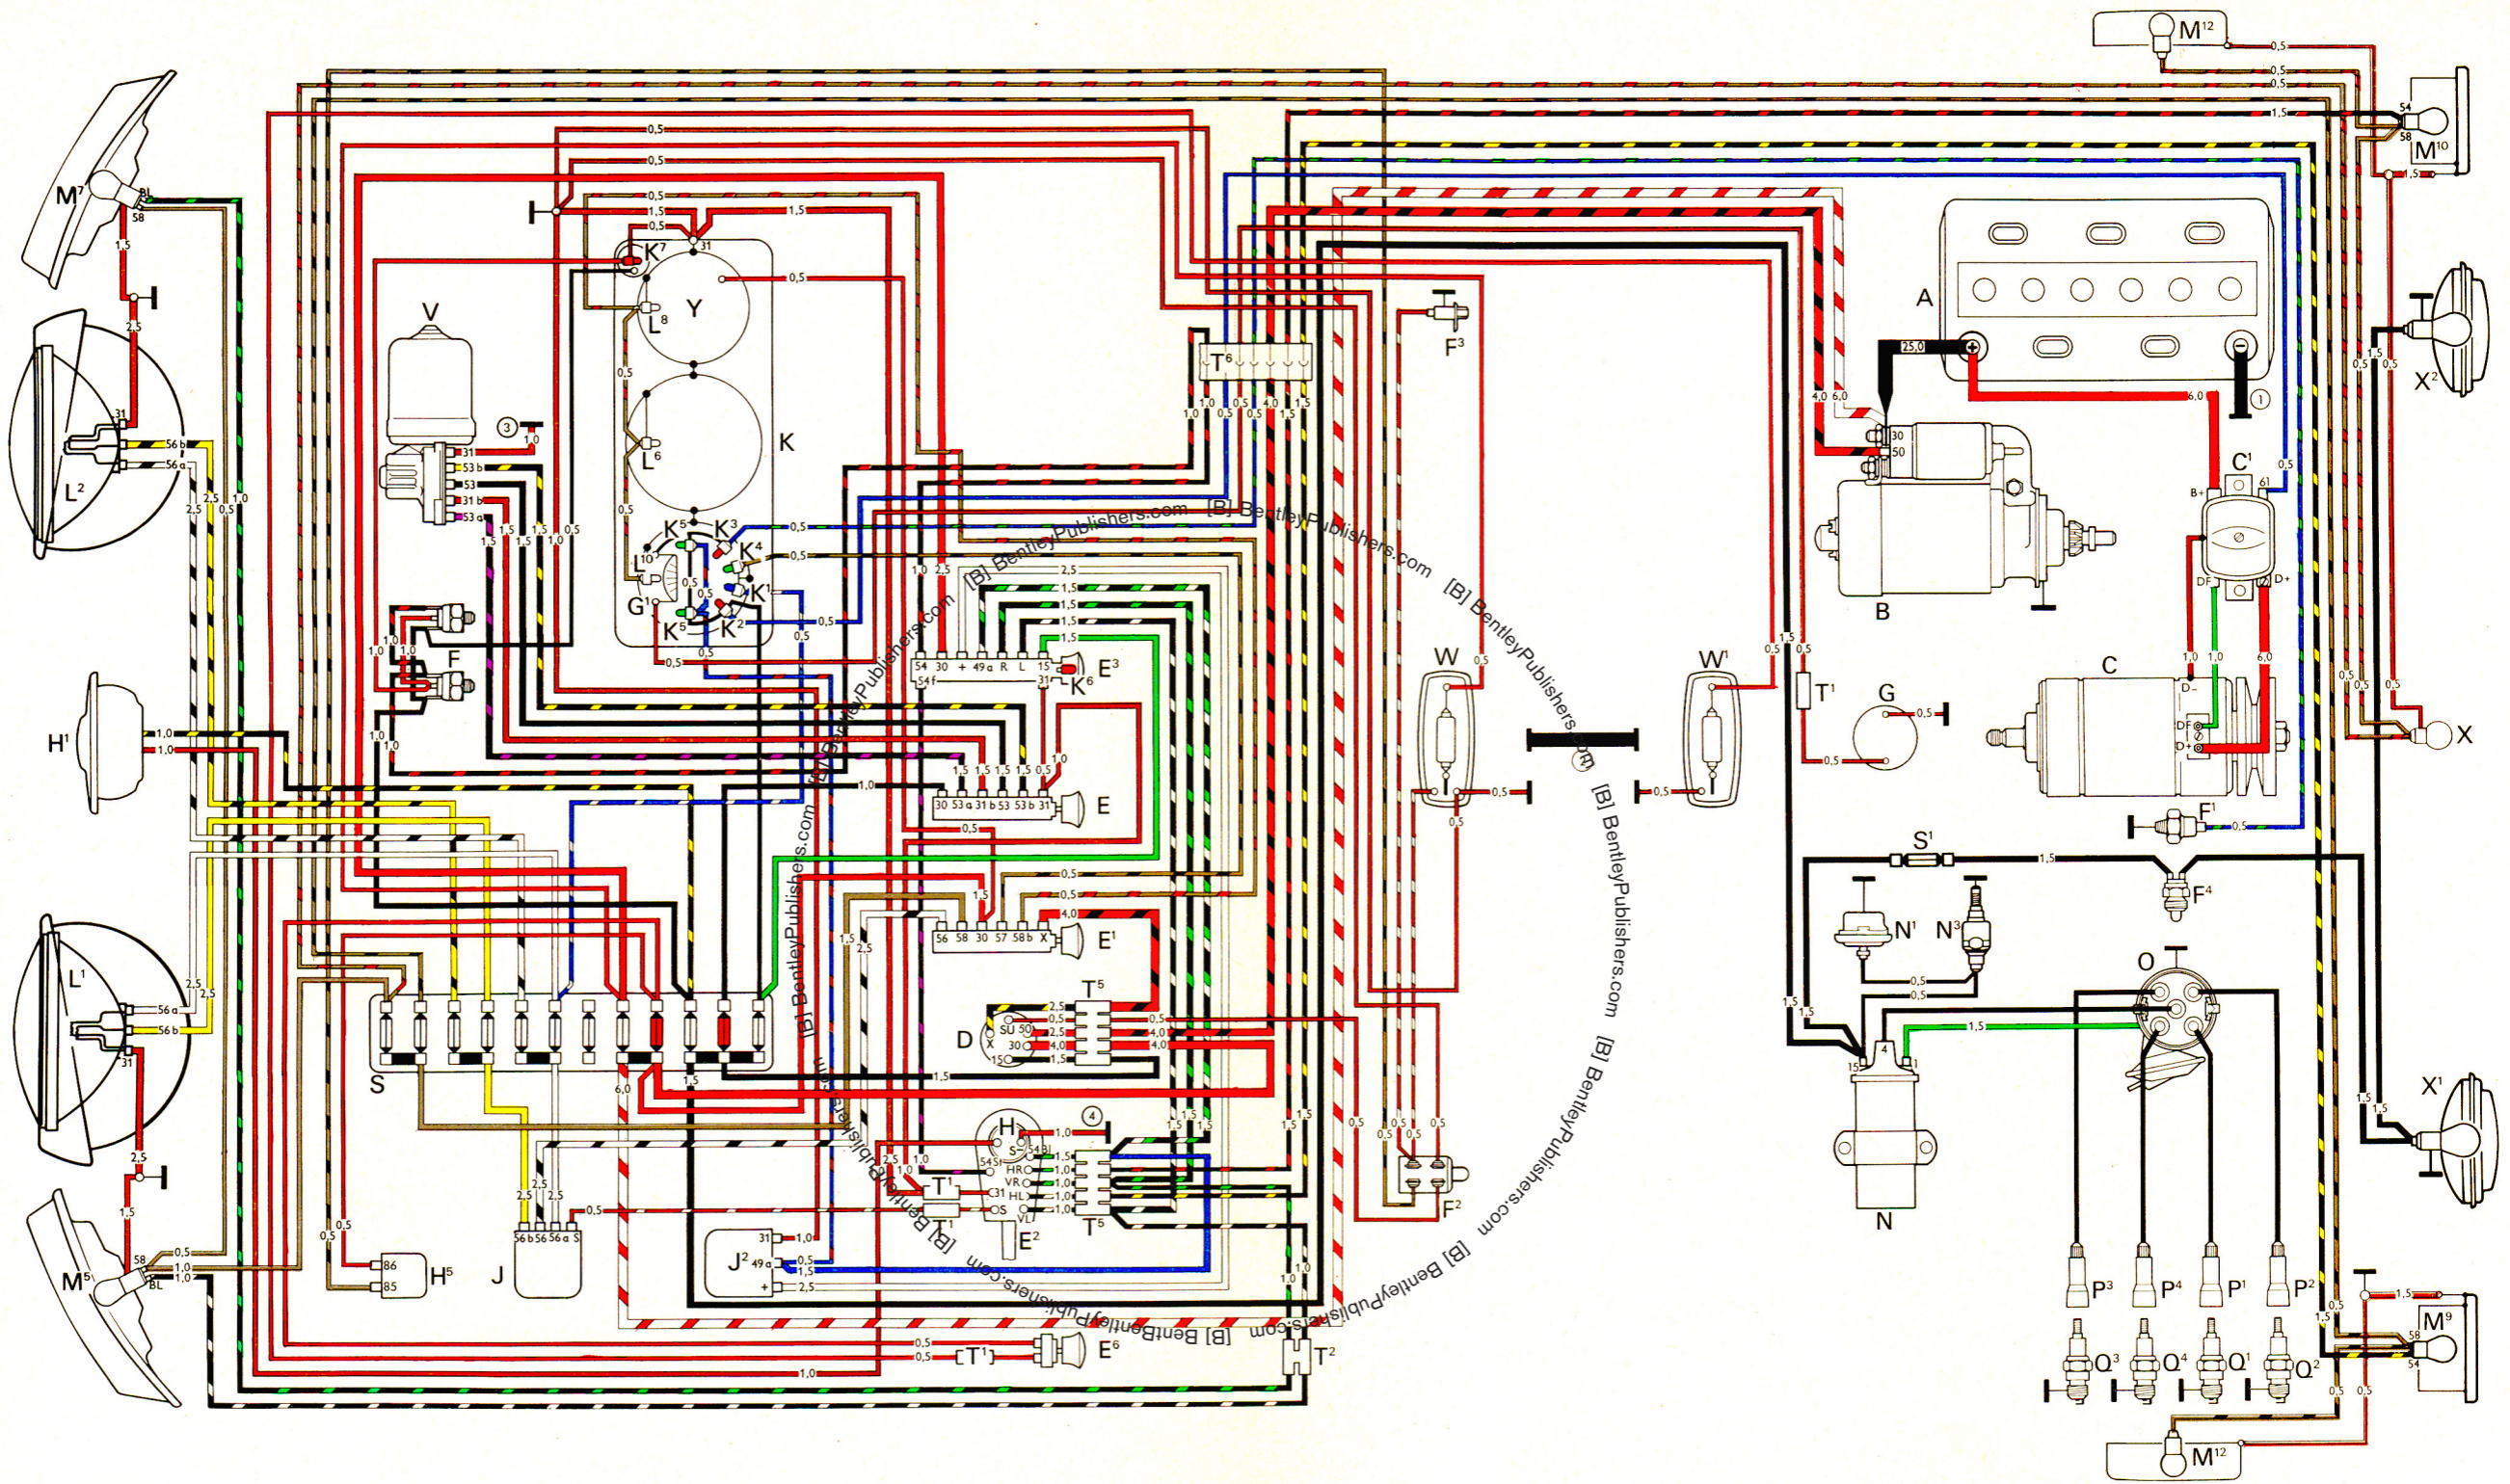

- A - Battery
- B - Starter
- C - Generator
- C' - Regulator
- D - Ignition / starter switch
- E - Windshield wiper switch
- E' - Light switch
- E² - Turn signal and headlight dimmer switch
- E³ - Emergency flasher switch
- E⁶ - Interior light switch, rear
- F - Brake light switch with warning switch
- F¹ - Oil pressure switch
- F² - Door contact switch, left, with contact for buzzer
- F³ - Door contact switch, right
- F⁴ - Back-up light switch

- G - Fuel gauge sending unit
- G¹ - Fuel gauge
- H - Horn button
- H¹ - Horn
- H⁵ - Ignition key warning buzzer
- J - Dimmer relay
- J² - Emergency flasher relay
- K - Instrument panel insert
- K¹ - High beam warning light
- K² - Generator charging warning light
- K³ - Oil pressure warning light
- K⁴ - Parking light warning light
- K⁵ - Turn signal warning light
- K⁶ - Emergency flasher warning light
- K⁷ - Dual circuit brake system warning light
- L¹ - Sealed beam unit, left headlight

- L² - Sealed beam unit, right headlight
- L⁶ - Speedometer light
- L⁸ - Clock light
- L¹⁰ - Instrument panel light
- M⁵ - Turn signal and parking light, front, left
- M⁷ - Turn signal and parking light, front, right
- M⁹ - Tail-, brake-, turn signal light, left
- M¹⁰ - Tail-, brake-, turn signal light, right
- M¹² - Sidemarker light, rear
- N - Ignition coil
- N¹ - Automatic choke
- O - Ignition distributor
- P¹ - Spark plug connector, No. 1 cylinder
- P² - Spark plug connector, No. 2 cylinder
- P³ - Spark plug connector, No. 3 cylinder
- P⁴ - Spark plug connector, No. 4 cylinder

- Q¹ - Spark plug, No. 1 cylinder
- Q² - Spark plug, No. 2 cylinder
- Q³ - Spark plug, No. 3 cylinder
- Q⁴ - Spark plug, No. 4 cylinder
- S - Fuse box
- S¹ - Fuse for back-up light
- T¹ - Cable connector, single
- T⁵ - Cable connector, five connections
- T⁶ - Cable connector, seven connections
- V - Windshield wiper motor
- W - Interior light, front
- W¹ - Interior light, rear
- X - License plate light
- X¹ - Back-up light, left
- X² - Back-up light, right
- Y - Clock

- ① - Ground strap battery to frame
- ② - Ground strap transmission to frame
- ③ - Ground strap windshield wiper
- ④ - Ground strap horn button to steering coupling